


Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.


NINJA®

PRO TOUCHSCREEN BLENDER PLUS QUICK ASSEMBLY


TOTAL CRUSHING® PITCHER

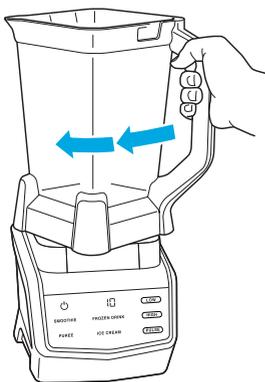

- 1.**
Place pitcher on base and turn clockwise to lock in place.

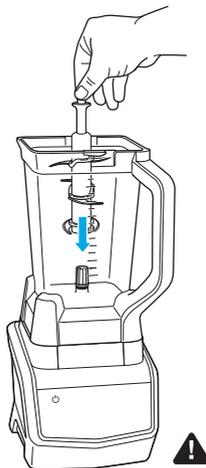

- 2.**
Holding the Stacked Blade Assembly by the top of the shaft, insert it into the pitcher.

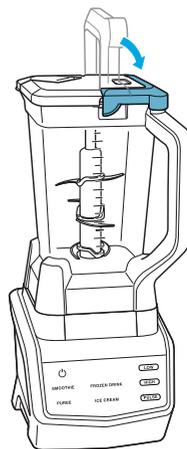

- 3.**
Align arrows on lid and handle, then lower handle to lock in place.

INTUITIVE TOUCHSCREEN TIPS



Be sure to remove the touchscreen interface protector before use. Lift off by pulling the "PEEL HERE" tab down and off of the unit.

Thanks to a touchscreen that makes selecting a program easier than ever. Simply choose between pre-set programs and manual controls to create recipes with one touch.



WARNING: Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto pitcher before pouring contents. If pouring without lid, carefully remove blade assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA®

PRO TOUCHSCREEN BLENDER PLUS QUICK ASSEMBLY

INTUITIVE TOUCHSCREEN PROGRAMS

AUTO-iQ® PROGRAMS:

Intelligent pre-set programs combine unique blending and pausing patterns that do the work for you.

SMOOTHIE

Fresh/Frozen Fruits
Milks/Yogurts
Protein Shakes

FROZEN DRINK

Margaritas
Daiquiris
Milkshakes

PUREE

Sauces
Dips

ICE CREAM

Sorbet
Sherbet
Frozen Yogurt

MANUAL CONTROLS:

PULSE, LOW, and HIGH run continuously until turned off, to give you ultimate control.

PULSE

LOW

HIGH

CLEANING

Dishwasher: Container, lid, and Stacked Blade Assembly are all top-rack dishwasher safe. Ensure the blade assembly is removed from the container before placing in the dishwasher.

Hand-Washing: Wash container, lid, and Stacked Blade Assembly in warm, soapy water. When washing the blade assembly, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assembly with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

Touchscreen: To clean the touchscreen, unplug the unit and always use a soft material to avoid scratching. To remove residue from the screen, you may use an all-purpose cleaner.



WARNING: Handle the Stacked Blade Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

QUESTIONS? We're here to help. Visit ninjakitchen.com